

Transmitter Radio Control Copy Remote Quick Start Guide

Step 1: Enter copy mode

Press "Remote/Set" to power on remote then left and right arrows simultaneously to enter pairing mode and select "Copy mode" in menu.

HOLD

Step 2: Copy mode-Master Remote

Press "Remote/Set" to select "Master" role. Then "Wait...Network Init" screen will pop up.

Step 3: Copy mode-Master Remote

Press right arrow to start transmission.

Step 4: Copy mode-Slave Remote

On "Slave" remote, repeat steps 1 and 2 but select option 2 for slave.

Step 5: Copy mode-receiving

Press right arrow to start receiving process on "slave" remote.

Step 6: Copy Complete

Press right arrow in "master" remote to complete copy process.

Step 7: Ready for use

Once the copy has been completed, press "Remote/Set" and cycle to paired door using left or right arrows. Once door is selected, press "Remote/Set" to open or close door.

Please note: Screen will turn off if inactive after 5 seconds.

Step 8: Ready for use

If the remote does not function as expected*; please refer to the manual for detailed info or call customer service: +1-800-294-4358

* Refer to the SmartSync Remote Control, Wireless User Manual for more detailed instructions or for more ways of pairing.