

# ***Heavy Duty Bottom Bar Installation***

## Installation

Before installing the curtain, verify that there is enough side room to slide the Heavy Duty Bottom Bar onto the curtain after the curtain is installed. If side room is limited, it will be necessary to install the bottom bar on the curtain prior to attachment of the curtain to the shaft.

After the shaft and curtain are installed, remove the bottom endlock on one side of the curtain by removing the nuts and bolts. Slide the Heavy Duty Bottom Bar onto the side of curtain that the bottom endlock has been removed from as shown in Figure 1.

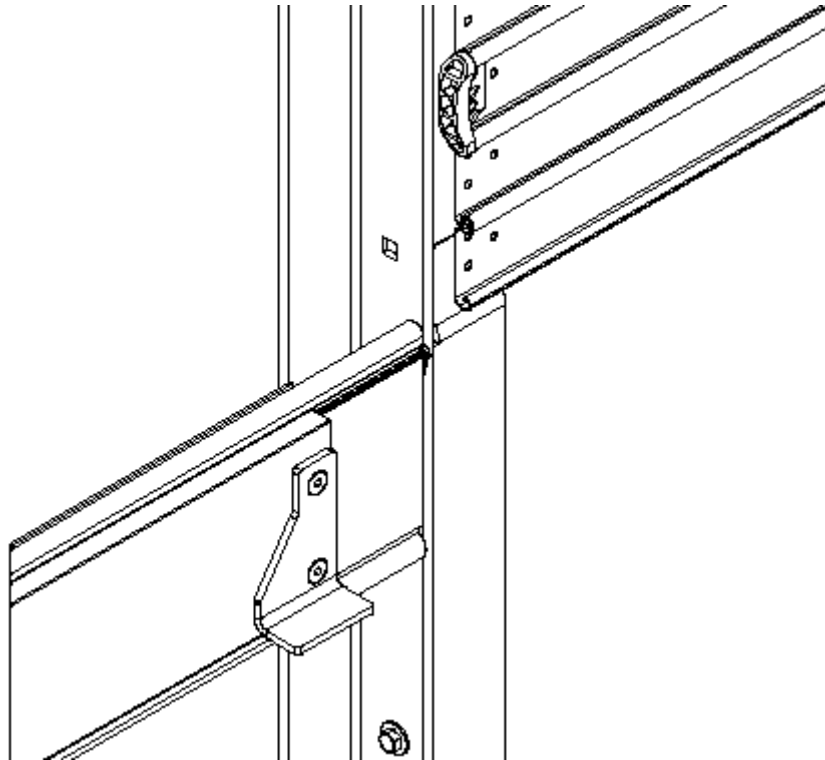


Figure 1.

After sliding the bottom bar on, reinstall the endlock as it was before with the nuts and bolts.